


VISTA POSTERIORE - BACK VIEW

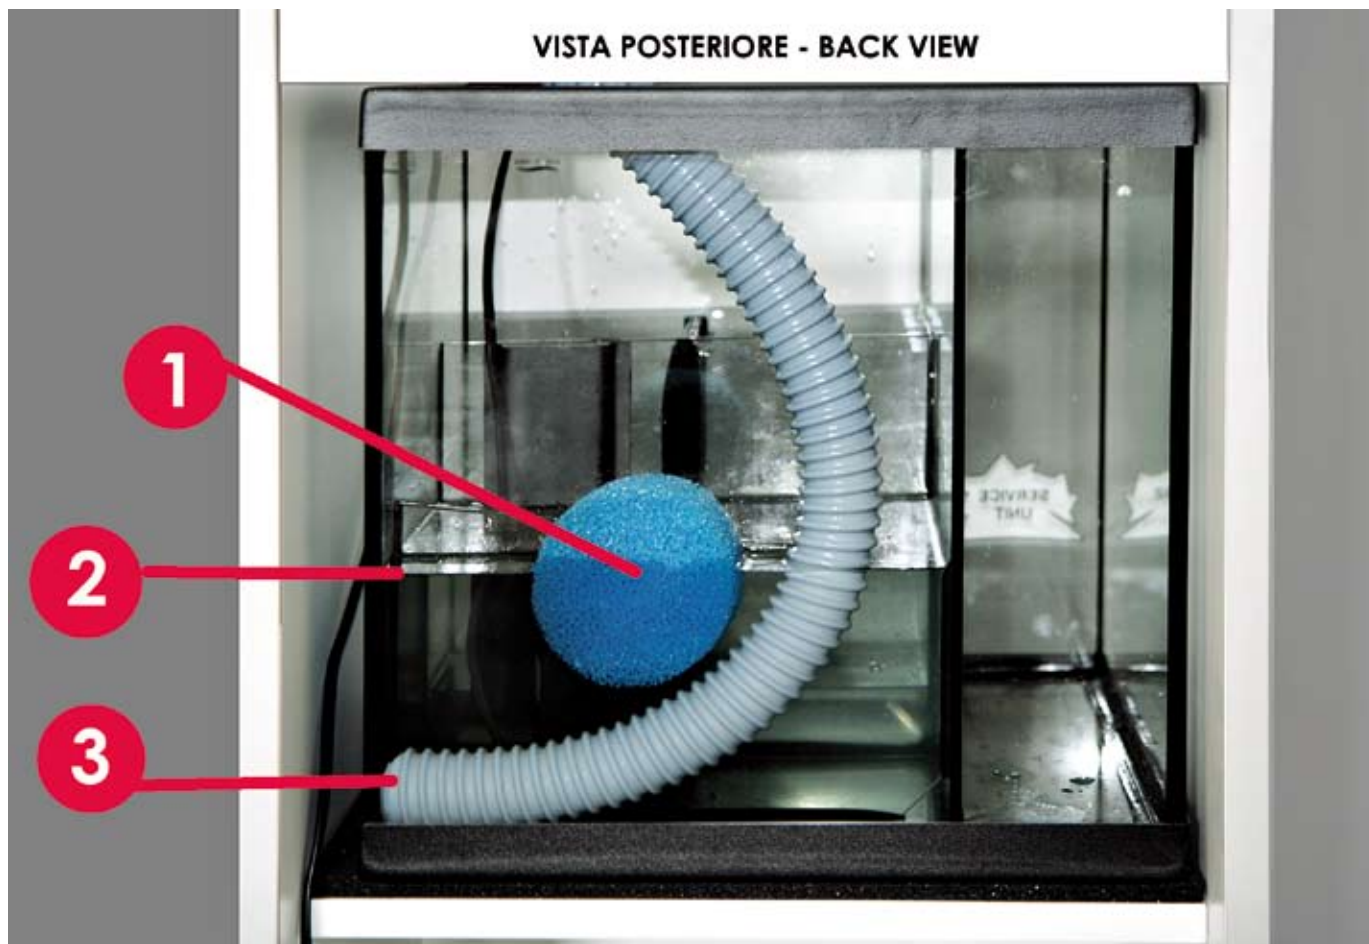

IT-Essendo il SUMP del vostro acquario relativamente piccolo, al fine di evitare la presenza di micro bolle in vasca, è necessario posizionare la pompa lontano dalla caduta ed evitare che le bolle provenienti dallo scarico invadano la zona in cui è posizionata la pompa di ritorno.

A questo scopo:

- 1)** accertarsi che il livello dell'acqua sia adeguato (circa 3 cm sotto la paratia - vedi foto)
- 2)** posizionare l'apposita spugna in modo che le bolle di superficie rimangano imbrigliate (centralmente in alto nella camera posteriore)
- 3)** posizionare il tubo di caduta all'estrema destra del SUMP (sinistra nella foto vista da dietro)

IMPORTANTE: la pompa di mandata va regolata al minimo.

UK- Being the Sump of your aquarium relatively small, in order to avoid the presence of micro bubbles in the tank, you must locate the pump away from the drain tube and avoid that the bubbles coming from the drain tube encroach the area where the return pump is positioned.

Please proceed as described below:

- 1)** make sure the water level is adequate (about 3 cm below the bulkhead - see photo)
- 2)** locate the round sponge so that the surface bubbles remain harness (center - top of the back chamber)
- 3)** place the drain tube on the far right of the Sump (left end from the back in photo)

IMPORTANT: The top-up pump must be adjusted to the minimum flow.